

Quick Use Guide



1 STEP 1: ONE-HANDED "CLICK PEN" ACTIVATION



- Pass with blade retracted
- Hold like a click pen



- Use thumb to deploy blade

2 STEP 2: INCISE



- Transition to cutting position

3 STEP 3: RETRACT



- Press top button to retract blade without changing grip
- Listen for an audible "click" that indicates the blade is safely retracted

4 STEP 4: TRIM



- Use retracted blade for additional needs